


NOTE: Refer to Owner's Manual for maximum carrying capacity of the vehicle. Weight must NOT exceed lower value.

STEP 1: Fitting End Support to Cross Bar

- Insert End Support into Cross Bar.
- Insert Nut into Bottom Slug and then slide both components into Cross Bar.
- Loosely** fasten using Bolt, Spring Washer and Flat Washer. Assemble as shown in Fig 1.
- Fit End Cap to each end of Cross Bar.
- Do not fully tighten at this stage.



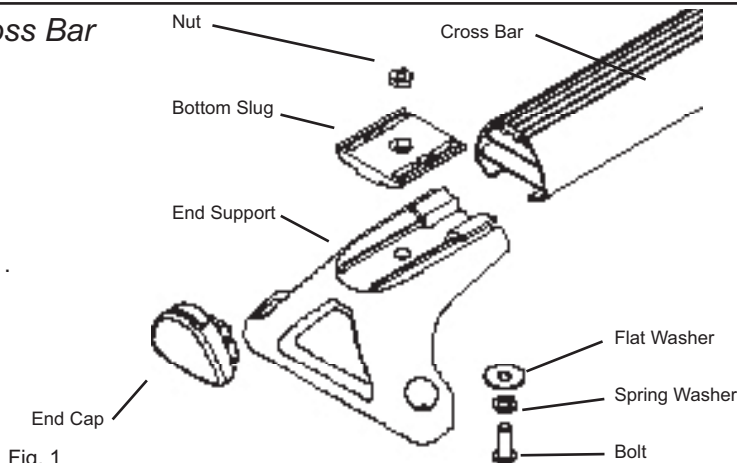


STEP 2: Placement of Locking Straps

- Carefully remove black trim covers from roof (Fig 2a). Located in the recess are the Anchoring Brackets.

NOTE: Take care when removing Trim Covers to avoid damaging Trim Cover Clips. Covers can not be replaced while rack is fitted. Store covers in a safe place, ie Glove Compartment.

- Remove the existing Anchoring Brackets & existing Bolts from vehicle. (Fig 2b).
- Place Locking Strap over bolt holes (Anchoring Points). Using the supplied bolt M8x20mm, secure the Locking Strap to each Anchor Point. Note the orientation of Nylon Washer, Locking Strap, Flat Washer to the M8x20mm Special Bolt. (Fig 2c).
- A **Firm** hand tightness using key is adequate.

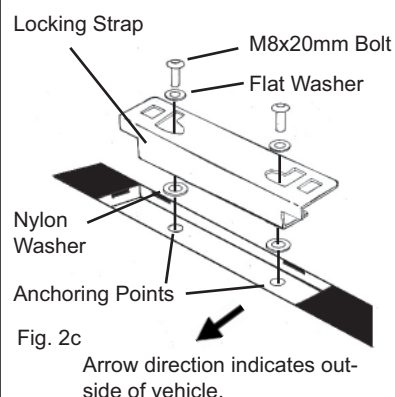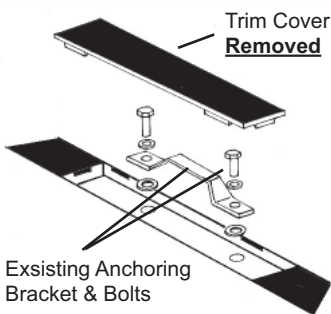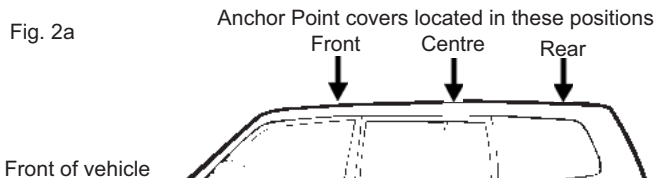

STEP 3: Fitting Cross Bars to Vehicle.

- Place Cross Bar assembly onto appropriate Locking Straps. Loosely fit Special Bolts through End Support and engage Cage Nut. Tighten two or three turns with key supplied. Go to other side of vehicle and fit other End Support the same. (Fig 3a).
- Measure equal distance (x) between end of Cross Bar and End Support on each side of vehicle. (Fig 3b)
- Tighten all bolts including the End Support to Cross Bar fixing bolts assembled in Step 1.

USAGE INSTRUCTIONS

