

# FITTING INSTRUCTIONS FOR HOLDEN CRUZE SEDAN JUN '09 ONWARDS

# PART NUMBER: *GTX078R* FITTING TIME: EST. 15 MINUTES




## ROOF-RACK LOADING CAPACITY: **60kgs**

ISSUE: A ISSUE RELEASE DATE: 16/03/2012 TOTAL NUMBER OF PAGES INCLUDING COVERSHEET: 6

#### 2. KIT DRAWING AND CONTENTS


ITEM NO.	PARTS	QTY	DESCRIPTION
1	LENGTH = 949mm	x1	ROOF-RACK CROSS-BAR ASSY (FRONT)
2	LENGTH = 909mm	x1	ROOF-RACK CROSS-BAR ASSY (REAR)
3		x1	ROLA END SUPPORT COVER KIT (SET OF 4) (25-0150) - LEFT COVERS x2 - RIGHT COVERS x2 - KEYS x4
4	Front Pads Set Rear Pads Set	x1 x1	M2 FRONT MOUNT PADS KIT (25-0173) M2 REAR MOUNT PADS KIT (25-0174)
	Front Adapter SetRear Adapter SetImage: Constraint of the setImage: Constraint of the set	x1 x1	H1 FRONT ADAPTER KIT (25-0175) H1 REAR ADAPTER KIT (25-0176)
5	Front Right Front Left Rear Right Rear Left   3803 3804 3805 3806	x1	STRAP BRACKETS AND HARDWARE KIT - TT27 ASSEMBLY'L'KEY x1 (22-0811) - M6x50mm STAR HEAD BOLT x4 (22-0355) - STRAP BRACKETS x4

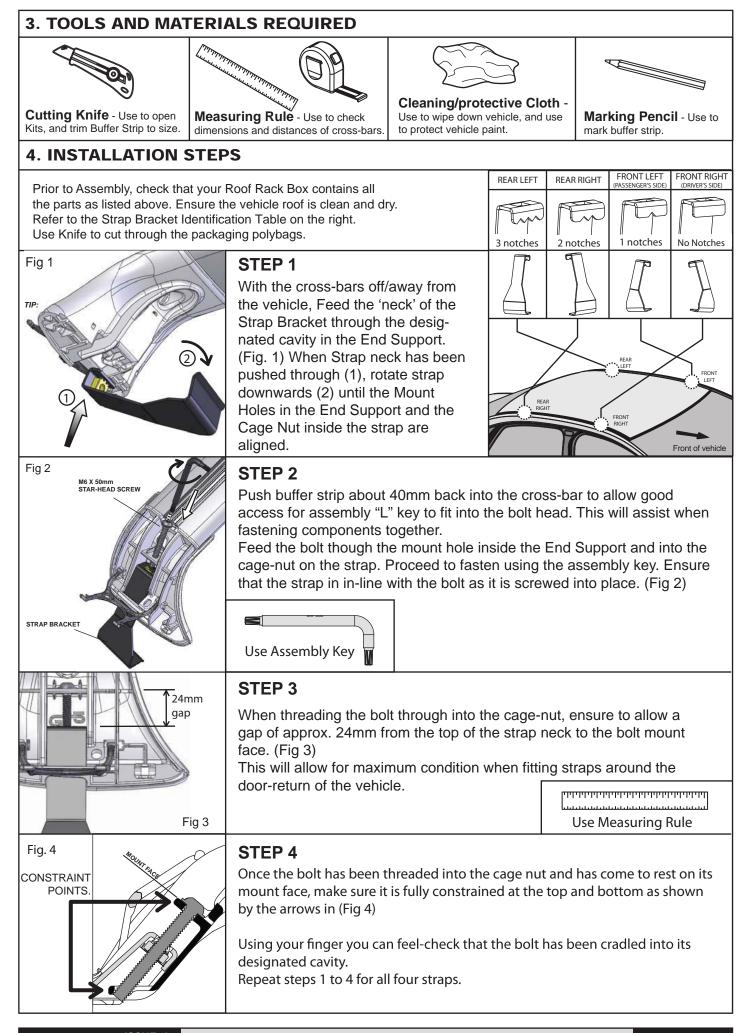


GTX078R-FI ISSUE: A

Fig. 5	STEP 5		
	Refer to the part markings engraved in the parts to identify your set of		
Part Markings	Mount Pads and Adapters. Your set includes: Front: M2 Pads (H1 adapter)		
O the	Rear: M2 Pads (H1 adapter)		
Fig. 6	STEP 6		
	Ensure you have sorted the Adapters to correspond with their respective		
	Mount Pads. Insert the Adapters into the bottom of the Mount Pad ensuring you		
	maintain alignment with the designated cavities.		
	Push through firmly until you can see the 'pip' has completely protruded through into the top surface.		
	Repeat steps 5 and 6 for all four Mount pads.		
Fig. 7	STEP 7		
	Use Cleaning/protective cloth to wipe away and		
	dirt/dust/water from the roof gutter before Cleaning Cloth		
	When placing the Mount Pads onto the roof of the vehicle, ensure that		
	the adapter sits inside the gutter channel on the roof whilst the base of the pad rests on the smooth face of the roof turret (see Fig 7).		
Fig. 8	STEP 8		
	Open all the doors(front/rear) of the vehicle. Using a rule, measure the		
	distances specified in the diagram from the 'part line' between front and rear doors located on the "b" pillar.		
Front	NOTE: Keep all doors ajar whilst working though the remainder of the		
	installation steps.		
Fig. 9 Roof Channel Strip Front of vehicle	<b>STEP 9</b> The distance dimension from Step 8 should be taken from the centre line		
	of the hollowed out section in the mount pad. This dimension translates		
Alar and	back to the centreline of the strap once mounted. Align all 4 mount pads in this manner ensuring Step 7 to Step 9 have been		
	followed carefully.		
	<b>Caution:</b> For Steps 9 to 11 ensure to use a soft cloth		
Strap location Door Sill Front Right phantom centreline Pad Shown.	where applicable, to cushion the End Support and Strap		
phantom centreline Sill Pau Shown. Fig. 10a	STEP 10		
	With one strap loosely mated around the door return, hold the other strap		
	in your fingers whilst flexing it outwards of the roof body.		
Front of vehicle	(Refer to Step ① in Fig 10a). Next proceed to pull the strap down over the roof body and into its		
Fig. 10b	designated place around the door return.		
	(Refer to Step②in Fig 10a) Ensure the End Support has fully located into the grooves of the Mount		
	Pad. (Fig. 10b)		
GTX078R-FI 16/03/12	PG 4 OF 6		

### PG 4 OF 6

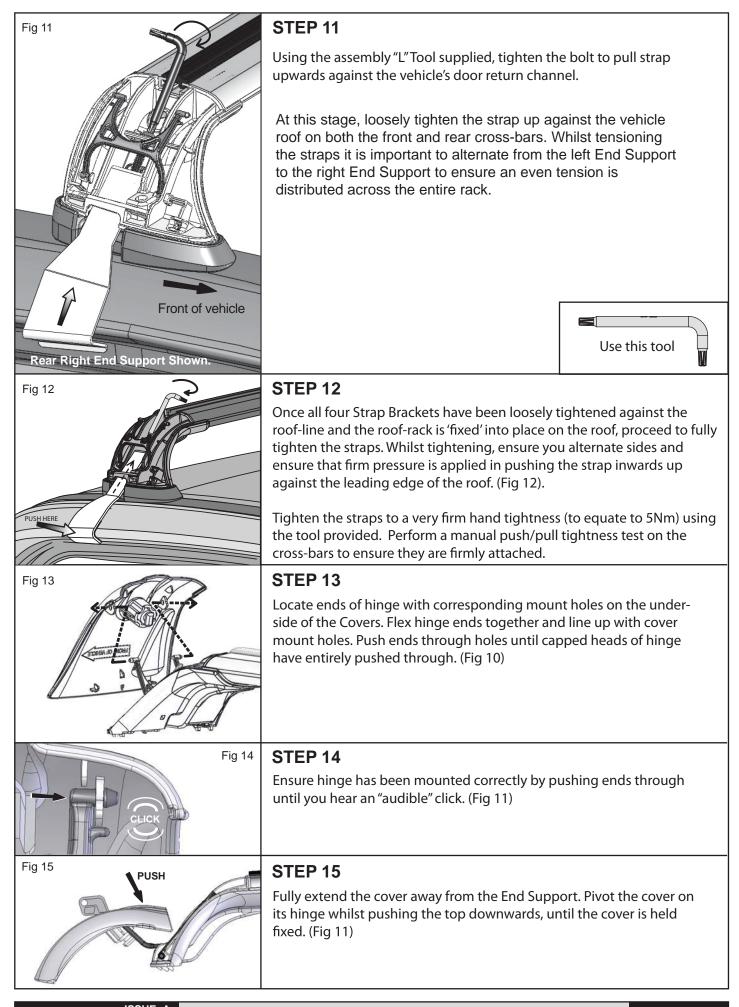

GTX078R-FI 16/03/12

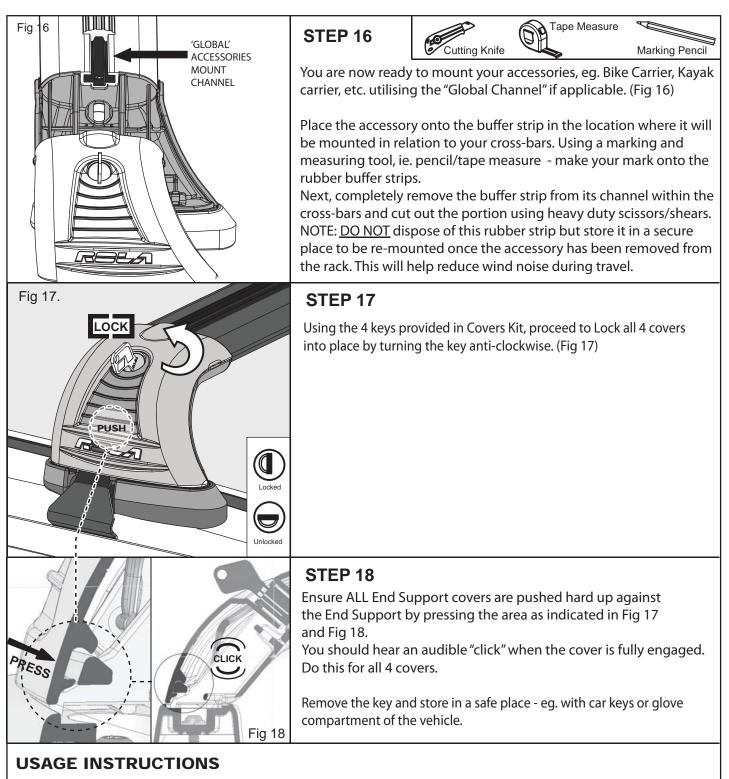

It is essential for the proper assembly, operation and use of the Roof-rack that the instructions and safety precautions supplied are strictly observed. The Maximum permissible load for your Roof Bar is the lower of the maximum load capacity specified in you vehicle operation manual, or specified as applying to the Roof-rack. Do not exceed the maximum specified Load capacity.

Maximum Permissible Load = Weight of the Roof-rack + Weight of Accessories + Weight of Load(Cargo).

When fitting the Roof-rack and transporting a load, ensure the vehicle's functions are not impaired (eg. sunroof, aerials, windscreen wipers, mirrors). Rear doors on Hatch - and wagon-type vehicles should be inspected for adequate clearance for full opening operation of the boot/tailgate. Stop and check all screw connections, bolts and retaining straps after a short distance of travel. Repeat these checks at regular intervals.

#### WARNINGS

Remember that the fitting of a Roof-rack and the transport of a load increases the overall height of the carrying vehicle. Where the roof-rack is to be used in off-road conditions, a safety weight reduction of 1.5 should be observed from the total carrying capacity (eg. 60kg becomes 40kg).

Cequent will not be liable to the purchaser of any other person for any concequential, direct or indirect loss, damage or costs incurred or suffered by the purchaser or any other person including but not limited to damage to persons or property, loss of turnover, loss of profits, loss of business or goodwill arising from or in relation to the assembly and use of the Roof-rack, or the non-observance of the fitting and care instructions.