

FITTING INSTRUCTIONS FOR Honda CR-V Wagon Feb '07 On GTX Removable Roof-racks PART NUMBER: **GTX084A** FITTING TIME: EST. 15 MINUTES



# ROOF-RACK LOADING CAPACITY: **60kgs**

ISSUE: A ISSUE RELEASE DATE: 29/06/2012 TOTAL NUMBER OF PAGES INCLUDING COVERSHEET: 5

# 2. KIT DRAWING AND CONTENTS

ITEM NO.	PARTS	QTY	DESCRIPTION
1	LENGTH = 928mm M Curve	x1	ROOF-RACK CROSS-BAR ASSY (FRONT)
2	LENGTH = 886mm M Curve	x1	ROOF-RACK CROSS-BAR ASSY (REAR)
3		x1	ROLA END SUPPORT COVER KIT (SET OF 4) (25-0150) - LEFT COVERS x2 - RIGHT COVERS x2
4		x4	COVER PLATE (22-0839)
5		x1	HARDWARE KIT - TT27 ASSEMBLY KEY x1 (22-0811) - M6x25mm STAR HEAD BOLT x4 (22-0349) - BRASS ADAPTOR NUT x4 (22-0838) - M8 NUT x4 (22-0466) - WASHER x4 (PA237)

#### 3. TOOLS AND MATERIALS REQUIRED **Cleaning/protective Cloth Phillips Head** Measuring Rule - Use to Cutting Knife - Use to Marking Pencil -Use to wipe down vehicle, and use Screwdriver - Use open Kits, and trim Buffer check dimensions and distances to protect vehicle paint. Use to mark buffer strip. of cross-bars to assemble Cross Bars Strip to size. 4. INSTALLATION STEPS Prior to Assembly, check that your Roof Rack Box contains all the parts as listed above. Ensure the vehicle roof is clean and dry. Use Knife to cut through the packaging polybags. Fig 1a STEP 1 On the vehicle roof you will find 4 Anchor Point Covers paired in


two locations indicated by the arrows in Fig 1a.

Using a sharp suitable tool, carefully remove these covers to expose the anchor point studs, (Fig. 1b).

NOTE: Take care when removing to avoid damaging Trim Covers. Covers can not be replaced while rack is fitted.

For a Single-Bar fitment, only remove the two Front or the two  $\triangle$  Rear covers, depending on the fitment.

Store the Anchor Point Covers safely while the Roof Racks are ⚠ in use.

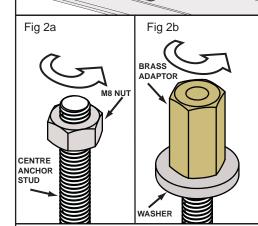

### **STEP 2**

The anchor point studs have a thick layer of paint. For the **Centre** Stud only, remove this by running down a M8 nut provided. Thread and then remove the nut for all four positions. (Fig 2a)

∧ Remove paint on centre studs only. Ensure nut is then removed.

Once paint has been removed from stud, install washer and brass adaptor. Firmly tighten adaptor to 8Nm. (Fig 2b) Repeat for all four positions

Fig 3

Fig 1b

REMOVE

# STEP 3

Fit the four cover plates as shown in Fig 3. Ensure that the center of the adaptor lines up with the centre hole in the cover plate.


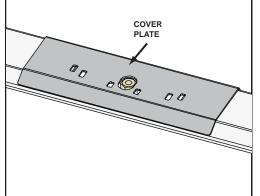


Fig 4	STEP 4 Place cross bar assemblies onto cover plates. The front bar is identified by a "FRONT" sticker underneath. Ensure that the plactic locating tabs on the underside of the end support allign with the holes in the cover plate. (Fig 4)
Fig 5	STEP 5
	Using a 25mm M6 Star Head Bolt provided, fix the crossbar assembly to the adaptor. Turn the M6 bolt 2-3 turns and repeat on the other side. Ensure the end supports are located correctly in the cover plate then tighten M6 bolts firmly. Repeat process for both bars. Tighten all M6 bolts to a firm hand tightness using the tool provided (to equate to 5Nm). Perform a manual push/pull tightness test on the cross-bars to ensure they are firmly attached.
Fig 6	STEP 6
Fig 6	<b>STEP 6</b> Locate ends of hinge with corresponding mount holes on the underside of the Covers. Flex hinge ends together and line up with cover mount holes. Push ends through holes until capped heads of hinge have entirely pushed through. (Fig 6).
Fig 6	Locate ends of hinge with corresponding mount holes on the underside of the Covers. Flex hinge ends together and line up with cover mount holes. Push ends through holes until capped
	Locate ends of hinge with corresponding mount holes on the underside of the Covers. Flex hinge ends together and line up with cover mount holes. Push ends through holes until capped heads of hinge have entirely pushed through. (Fig 6). <b>STEP 7</b> Ensure hinge has been mounted correctly by pushing ends

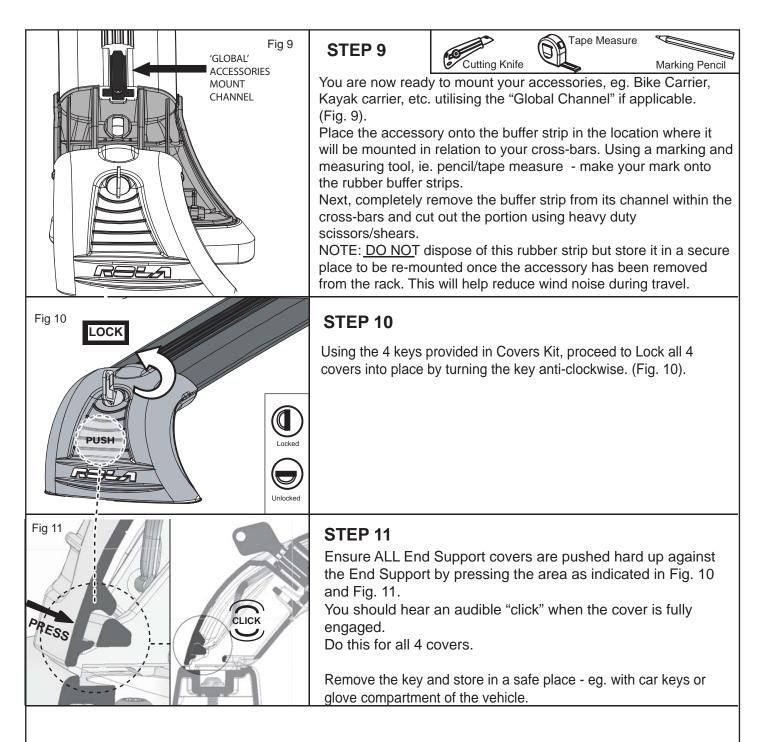

# USAGE INSTRUCTIONS

It is essential for the proper assembly, operation and use of the Roof-rack that the instructions and safety precautions supplied are strictly observed. The Maximum permissible load for your Roof Bar is the lower of the maximum load capacity specified in you vehicle operation manual, or specified as applying to the Roof-rack. Do not exceed the maximum specified Load capacity.

Maximum Permissible Load = Weight of the Roof-rack + Weight of Accessories + Weight of Load(Cargo).

When fitting the Roof-rack and transporting a load, ensure the vehicle's functions are not impaired (eg. sunroof, aerials, windscreen wipers, mirrors). Rear doors on Hatch - and wagon-type vehicles should be inspected for adequate clearance for full opening operation of the boot/tailgate. Stop and check all screw connections, bolts and retaining straps after a short distance of travel. Repeat these checks at regular intervals.

# WARNINGS

Remember that the fitting of a Roof-rack and the transport of a load increases the overall height of the carrying vehicle. Where the roof-rack is to be used in off-road conditions, a safety weight reduction of 1.5 should be observed from the total carrying capacity (eg. 60kg becomes 40kg).

Cequent will not be liable to the purchaser of any other person for any concequential, direct or indirect loss, damage or costs incurred or suffered by the purchaser or any other person including but not limited to damage to persons or property, loss of turnover, loss of profits, loss of business or goodwill arising from or in relation to the assembly and use of the Roof-rack, or the non-observance of the fitting and care instructions.