

Maximum Carrying Capacity: 2-Bars: 60kg; 1-Bar: 30kg

Parts List: (Refer to Fig.1)

Item	Description	Qty.	Part No.
1a	Cross Bars (with Buffer Strip)	2 (1)	EX1150B (APE fitment)
1b	Cross Bars (with Buffer Strip)	2 (1)	B11(B) (CAP fitment)
2	End Support	4 (2)	MSES017
3	Plastic Multi Pad	4 (2)	27-0717
4	Rubber Gasket	4 (2)	122296
5	Security Key	1	22-0811
6	55mm Bolts	2 (2)	22-0493
7	60mm Bolts	2 (2)	22-0893
8	Washer	4 (2)	PB768H
9	Coupling Nut	4 (2)	22-0867
7	Fitting instructions	1	

For the Single-Bar fitments, only the relevant Cross Bar and Bolts are included. The number shown in brackets denotes the quantity included in the Single-Bar fitments.

NOTE: Prior to Assembly

Prior to assembling, check that the kit contains all the parts you will need to fit the Roof Racks. Refer to the Parts List for guidance. Please read these fitting instructions prior to assembly.

STEP 1: Preparing Anchor Points

- Your roof rack is designed to utilise the anchor points concealed under plastic caps in the roof rails of your vehicle. The locations are shown in Fig. 2. Measurements are taken from the middle of the "B" Pillar
- Carefully remove the 4 plastic covers to expose the anchor points. Refer to Fig. 3.
- Store caps for use if/when roof racks are removed

Location of Anchor Points on Vehicle Roof:
Fig. 2



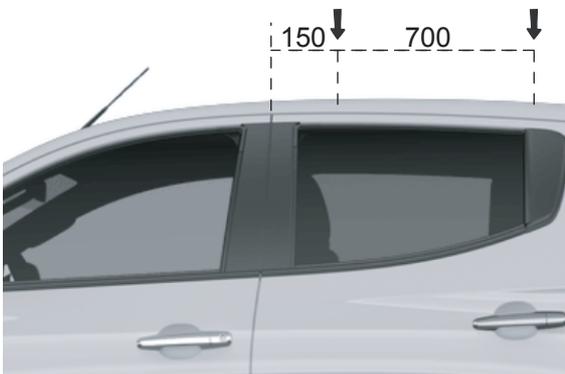


Fig. 1

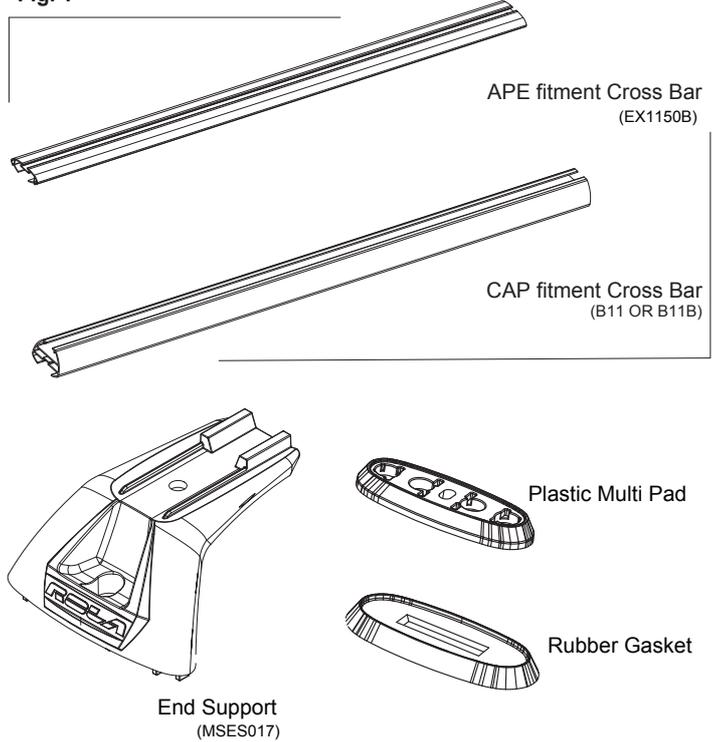

Fit Kit - Hardware

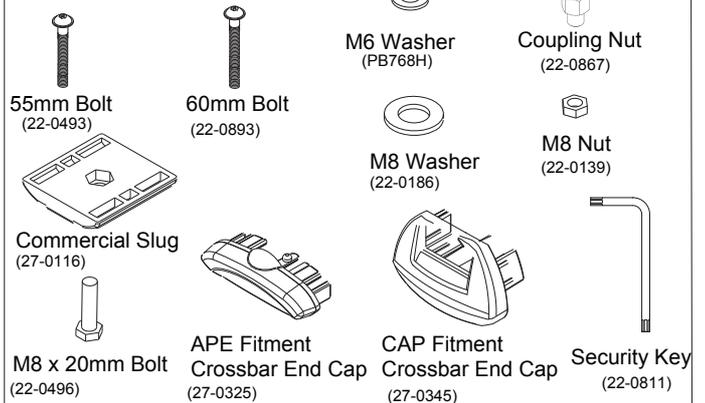


Please Note:

You will require the following tools



Fig. 3




FAILURE TO FOLLOW THESE INSTRUCTIONS WILL VOID WARRANTY

STEP 2: Installing Coupling Nuts

Insert a Coupling Nut into each of the 4 vehicle anchor points.
 Tighten with a 16mm spanner or socket

Fig. 4

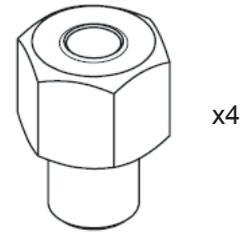


STEP 3: Installing the Rubber Gaskets and Multi Pads

A. Locate the Plastic Multi Pad onto the Rubber Gasket

Ensure that the center hole in the Multi Pad lines up with the coupling nut in the roof.

B. Repeat STEPS A and B with the remaining Adaptors.

Fig. 5a

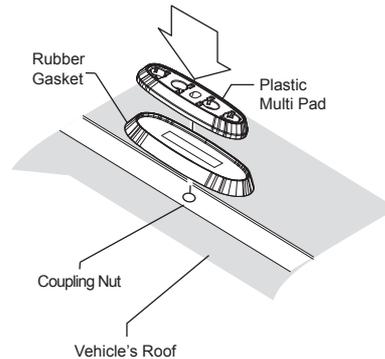

STEP 4: Fitting the Cross Bars to the Vehicle

A. Place an end support onto the adaptor from STEP 2, and loosely secure it down with a bolt and washer (55mm bolt for front and 60mm bolt for rear). Insert the bolt into the anchor hole and turning approximately 2-3 turns with the security key (Refer to Fig. 5a). Do not tighten yet. Repeat for the opposite side.

B. Place the crossbar onto the end supports ensuring that the end supports are located into the cutouts on the underside of the crossbar. (Refer to Fig. 5b)
 Check that the cross tube has equally distanced overhang on either side from the end support.

C. Insert the M8 nut into the cavity on the Commercial Slug. (Refer to Fig. 5c).

D. Insert the Commercial Slug into the cross tube, and align it so that the M8 nut in the Commercial Slug and the hole at the bottom of the end support line up. (Refer to Fig. 5c).

E. Secure the cross tube to the end support by screwing the M8x20mm bolt through the hole in the end support and up into the nut that is located in the cavity of the Commercial Slug nut. (Refer to Fig. 5c).

F. Using a 13mm Spanner, full tighten the 20mm bolt on the underside of the end support. (Refer to Fig. 5c).
 Using the Security Key, tighten the bolts to approximately 7Nm of torque or a firm hand-tightness. (Refer to Fig. 5c).

G. Insert an end cap into both ends of the cross tube (Refer to Fig. 5c).

STEP 5: Using the Roof Racks

A. Refer to 'Care for your Racks' to maintain your Roof Racks.

B. To load accessories into the Channel of the Cross Bars, remove the end cap from the end of the cross tube.
 Once the accessories have been loaded, re-insert the end cap back into the end of the cross tube.

Intermittently check that all Screws and Bolts are sufficiently tightened whilst the Roof Racks are in use.

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL VOID WARRANTY

Fig. 6a


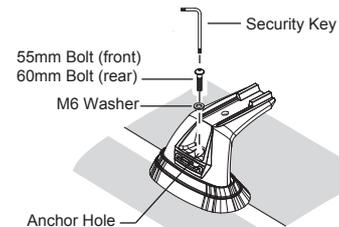


Fig. 6b

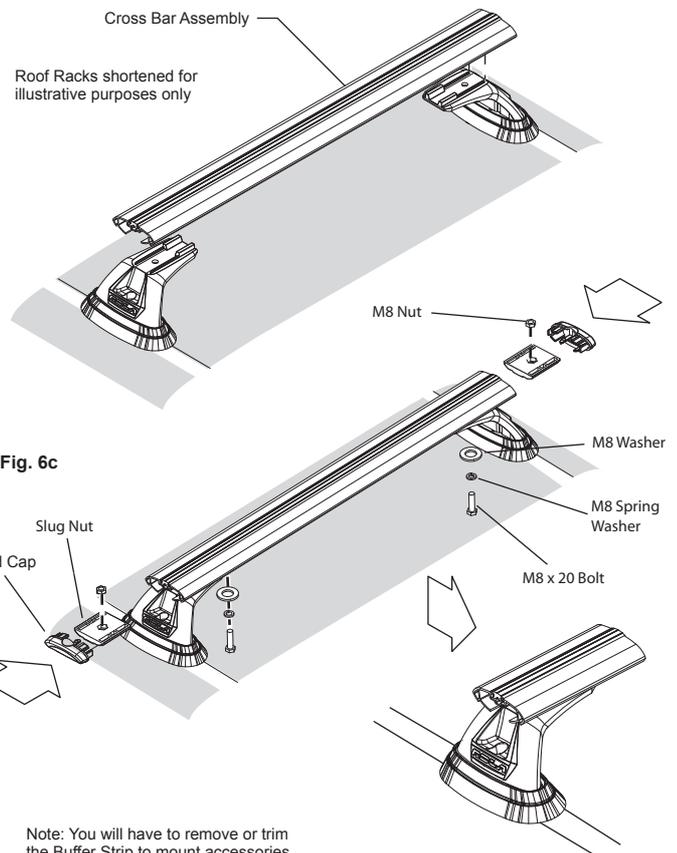

Note: You will have to remove or trim the Buffer Strip to mount accessories