

# GUTTER MOUNT ROOF RACKS

Product code number: **GLS206**

**Maximum Carrying Capacity:**

Fitting Instruction Sheet No.

264

Issue: C  
21/01/04

**NISSAN**  
Patrol TI/ST Lwb  
L/Roof 12/97 on

*Please read these instructions thoroughly before commencing installation.*

## ASSEMBLY OF CROSS BARS

- 1 Pre-assemble End Supports into Cross Bars. They are designed to be a tight fit: use a rubber mallet if necessary (Fig. 1).
- 2 Push the rubber Buffer Strip back about 20mm until the screw hole appears. Fit Phillips Head Screw and tighten. Replace Buffer Strip (Fig. 2).

## FITTING OF CROSS BARS TO VEHICLE

- 3 Ensure that the roof is clean; free of dust and grease.
- 4 Fit rubber U-section pieces to End Support (Fig. 3).
- 5 Fit Spacer Blocks in the rain channels where the Cross Bars are intended to go (Fig. 4). NOTE: Spacer Blocks should be omitted if Bolts are unable to engage into Brass Nuts.
- 6 Place Cross Bar in to rain channels on vehicle.
- 7 Place Brass Nuts in to End Supports, Fit bolts and washers through End Caps and Locking Straps.
- 8 Locate Brass Nuts in End Support housing; tighten all bolts evenly with Security key provided.

## FINAL CHECK

Ensure that both bars are parallel and are square to the front and rear axis of the vehicle. After loading check bolts tightness and ensure that End Caps are correctly engaged to the vehicle.

## USAGE INSTRUCTIONS

- Loads should be evenly distributed and secured. A number of accessories for carrying special loads is available, **otherwise only use NON-STRETCH tie-down straps.**
- Any weight carried on the vehicle will adversely affect its handling particularly in cornering or in a cross wind and the vehicle should therefore be driven with increased caution.
- Regularly check the tightness of the End Caps and the security of the load.
- Be aware of statutory requirements regarding maximum permissible projections from vehicles.

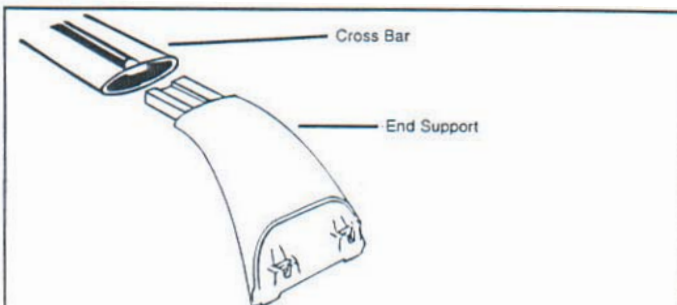


Fig. 1

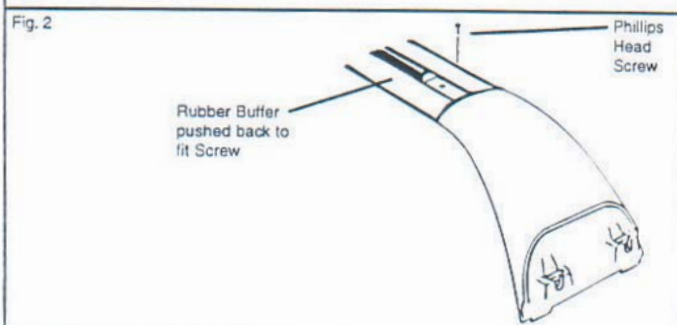


Fig. 2

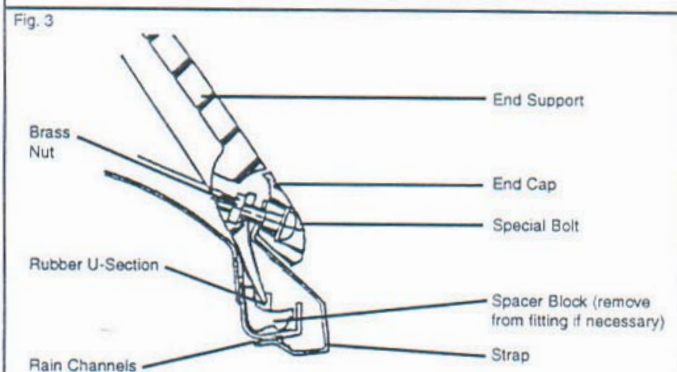


Fig. 3

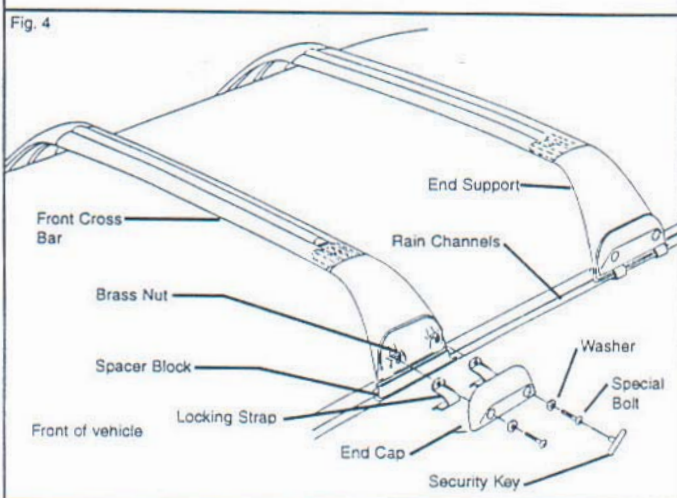


Fig. 4