



LOW MOUNT GUTTER MOUNT

LGMX001-FI
Revision C, March 2020

PACK CONTENTS & FITTING INSTRUCTIONS



M8 FLAT WASHER
(22-0195)
x4* / x6**



M8 SPRING WASHER
(22-0139)
x4* / x6**



M8 HEX NUT
(22-0139)
x4* / x6**



M8 T BOLT
(22-0961)
x4* / x6**



M8 LARGE FLAT WASHER
(22-0186)
x4* / x6**



M6 SECURITY BOLT
(22-0352)
x8* / x12**



M6 NUT INSERT
(22-0330)
x8* / x12**



GREY HANDLE KEY
(22-0356)
x1



UNDER-COVER STRIP
(32-0050)
x2* x3**




LOW MOUNT WITH END CAPS
x4* / x6** (25-0310 - 2 pack)
Each Low Mount contains two end caps



GUTTER MOUNT END SUPPORT
x4* / x6**




GUTTER MOUNT RUBBER BOOT
(22-0220)
x4* / x6**

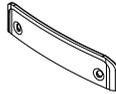

GUTTER MOUNT STRAP COVER
(34-0009)
x4* / x6**



GUTTER MOUNT STRAP
x4* / x6**

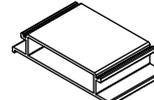

INTERCONNECTING BLOCK
(25-0312)
x3 for TFT1212, TFT1512 & TFT1812
x4 for TFT 2014



HEIGHT ADAPTOR KIT (BKB, BKC)

ONLY CONTAINED IN RELEVANT FITMENTS

*4 mounting point system
**6 mounting point system

NOTE: Fasteners supplied with Titan Tray are required for this fitment.

The supplied number of T bolts will be reduced corresponding to the amount of height adaptor kits with hex bolts.


1

Read instructions thoroughly before commencing installation.

Refer to Titan Tray instructions for tray assembly.


Skip to Step 5 on the following page if you have already inserted the interlocking blocks.

2

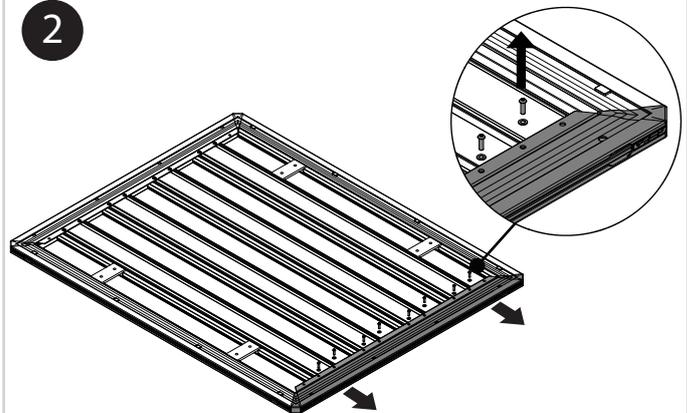

Place tray upside down. Remove fasteners on one side and remove the end plank.


3

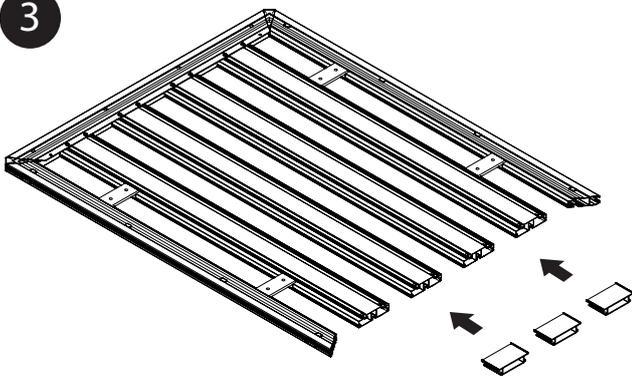

For TFT1212, TFT1512 & TFT1812:
Insert the three interlocking blocks between the four centre planks. Position interlocking blocks in the centre of the tray.

For TFT2014:
Insert the four interlocking blocks between the five centre planks. Position interlocking blocks in the centre of the tray.

4

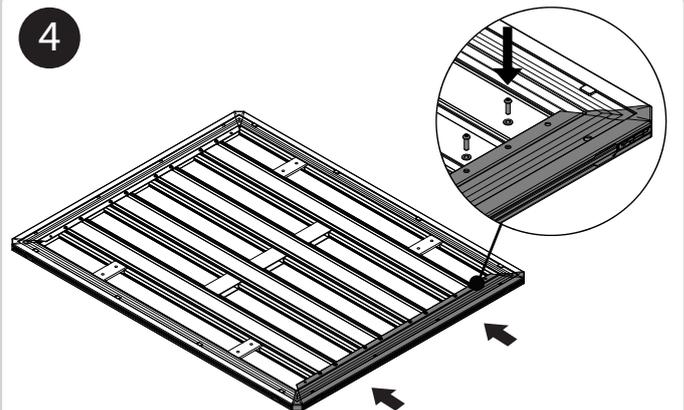

Re-install the end plank and fasteners. Tighten fasteners securely.

LOW MOUNT GUTTER MOUNT FITTING INSTRUCTIONS CONTINUED



5

Unclip and remove one end cap from each of the Low Mounts.

6

BKA
No Adaptor

BKB
One Adaptor

BKC
Two Adaptors

If your Low Mount kit contains height adaptors, slide the height adaptors into position on the end supports for each adaptor kit (e.g. BKA, BKB, BKC).

7

M8 T Bolt

M8 Hex Bolt

BKA

BKB & BKC

NOTE: Ensure to combine the correct height adaptor and bolt, as supplied in the BKA, BKB and BKC kits.

8

M8 T Bolt

Note: Use height adaptors with hex bolts when applicable (BKB & BKC).

Repeat for all end supports

9

Repeat for all end supports

10

M8 Large Flat Washer (22-0186)

M8 Spring Washer

M8 Hex Nut

Tip: Leave fasteners loose to allow adjustment in next steps.
Repeat for all end supports

11

FRONT
BKC

MID
BKB

REAR
BKA

EXAMPLE ONLY

Height adaptor kits are used to level the tray on a sloped roof. Locate the height adaptor kits and end supports to level your tray as required. In the example above, the large adaptor is located at the front and small adaptor in the middle and no adaptor at the rear in order to level the tray.

12

M8 Hex Nut

M8 Spring Washer


M8 Flat Washer (22-0195)

If your kit requires height adaptors, ensure the correct positioning as shown in the previous step.
Tip: Leave fasteners loose to allow adjustment in next steps.

LOW MOUNT GUTTER MOUNT FITTING INSTRUCTIONS CONTINUED




13

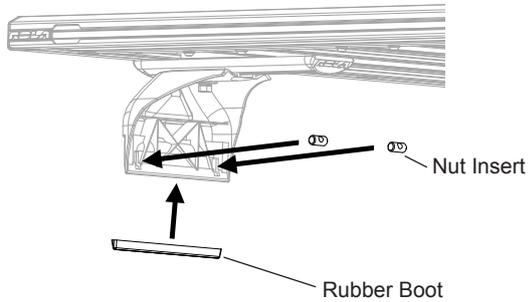

Repeat for all end supports


14

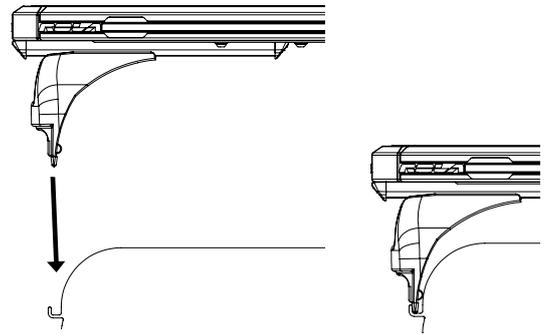

Lower tray onto vehicle gutter. And ensure all end supports are mounted in the vehicle gutter.


Tip: Measuring the distance between gutters, across the roof, can help ensure the end supports are in the right position before lifting the tray onto the roof.

15

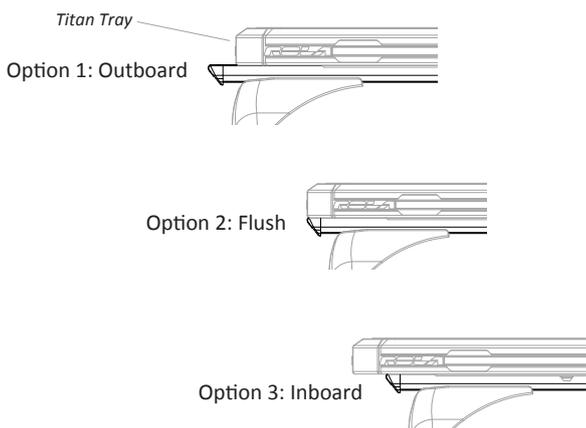


Slide the low mount to the desired width position. You can adjust the Low Mount to sit outboard, flush or inboard of the Titan Tray edge, depending on your preference and the width of your roof.

16

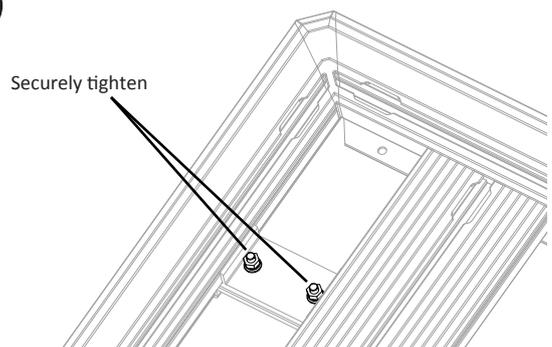


Tighten the fasteners on the top of the tray to secure the Low Mounts in place.

17

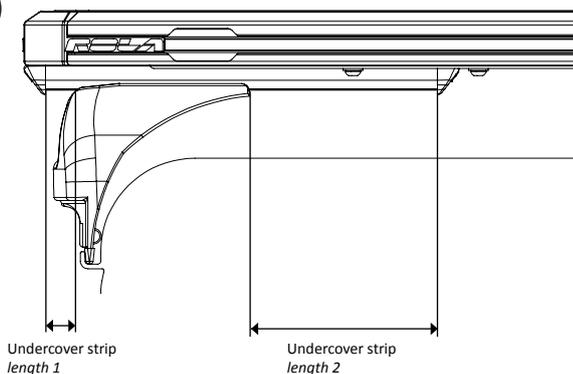

Cut and insert under-cover strip lengths for each Low Mount.

18

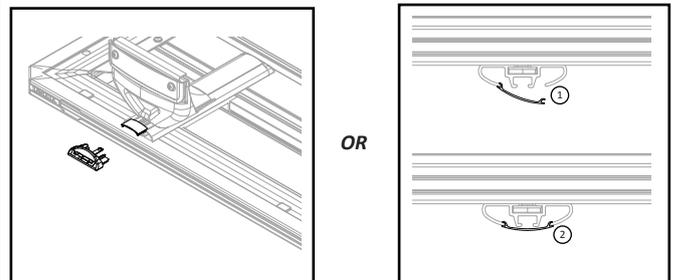


Insert under-cover strip lengths by sliding or clipping into the Low Mounts.

Tip: Remove the tray from the vehicle roof to make it easier to insert the under-cover strip.

LOW MOUNT GUTTER MOUNT FITTING INSTRUCTIONS CONTINUED

ROLA


19

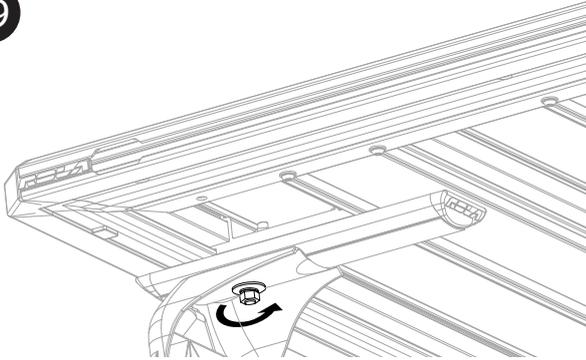

Tighten the M8 Nut on all end supports

Tip: This can be done while the tray is off the vehicle roof.
Ensure the end supports are in the correct position before tightening.


20

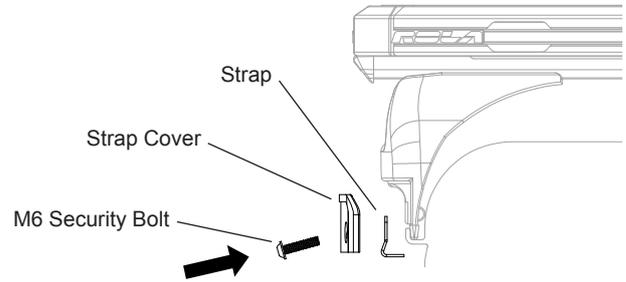

With the tray mounted on the vehicle roof gutters, insert the M6 Security bolt through the end support assemblies. Tighten to clamp the strap to the vehicle gutter.

Check all other fasteners are tight.

21

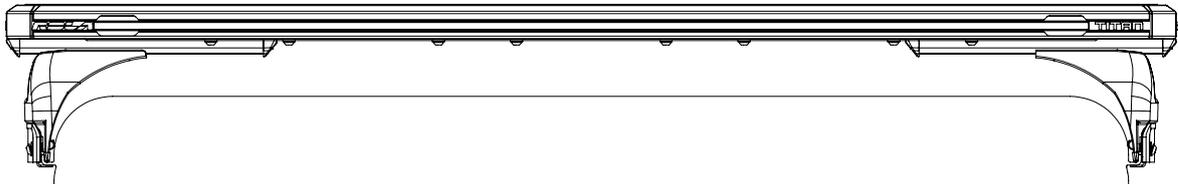

Your Low Gutter Mount tray is now complete.

USAGE INSTRUCTIONS

It is essential for the proper assembly, operation and use of the roof-rack that the instructions and safety precautions supplied are strictly observed. The maximum permissible load for your roof rack or tray is the lower of the maximum load capacity specified in your vehicle operation manual, or specified as applying to the roof-rack or tray. Do not exceed the maximum specified load capacity.

Maximum permissible load = weight of the roof-rack and tray + weight of accessories + weight of cargo load.

When fitting the roof-rack and transporting a load, ensure the vehicle's functions are not impaired (e.g. sunroof, aerials, windscreen wipers, mirrors).

Hatch and wagon vehicles should be inspected for adequate clearance for full opening operation of the boot/tailgate.

Stop and check all screw connections, bolts and retaining straps after a short distance of travel. Repeat these checks at regular intervals.

WARNINGS

Remember that the fitting of a roof-rack and the transport of a load increases the overall height of the carrying vehicle.

Where the roof-rack is to be used in off-road conditions, a safety weight reduction of 1.5 should be observed from the total carrying capacity (e.g. 60kg becomes 40kg).

Cequent will not be liable to the purchaser or any other person for any consequential, direct or indirect loss, damage or costs incurred or suffered by the purchaser or any other person including but not limited to damage to persons or property, loss of turnover, loss of profits, loss of business or goodwill arising from or in relation to the assembly or use of the roof-rack, or the non-observance of the fitting and care instructions.