





LOW MOUNT OPEN RAIL

LRS-FI
Revision C, March 2020

PACK CONTENTS & FITTING INSTRUCTIONS



M8 DROP-&-TURN BOLT (22-0924)
x4




M8 FLAT WASHER (22-0195)
x12




M8 SPRING WASHER (22-0162)
x12




M8 HEX NUT (22-0139)
x12




M8 T BOLT 22-0961
x8



LOW MOUNT WITH END CAPS
x4 (25-0310 - 2 pack)
Each Low Mount contains two end caps

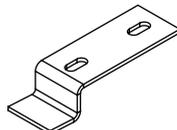


RAIL STRAP
x4



INTERCONNECTING BLOCK (25-0312)
x3 for TFT1212, TFT1512 & TFT1812
x4 for TFT2014



UNDER-COVER STRIP (32-0050)
x2



RUBBER PAD (30-0030)
x4

NOTE: Fasteners supplied with Titan Tray are required for this fitment.


1

Read instructions thoroughly before commencing installation.

Refer to Titan Tray instructions for tray assembly.


Skip to Step 5 on the following page if you have already inserted the interconnecting blocks.

2

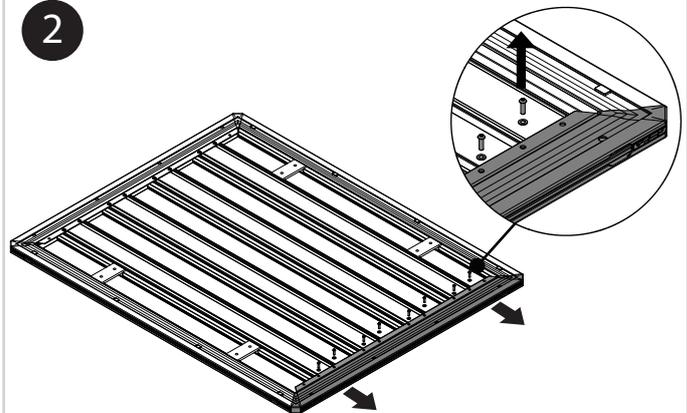

Place tray upside down. Remove fasteners on one side and remove the end plank.


3

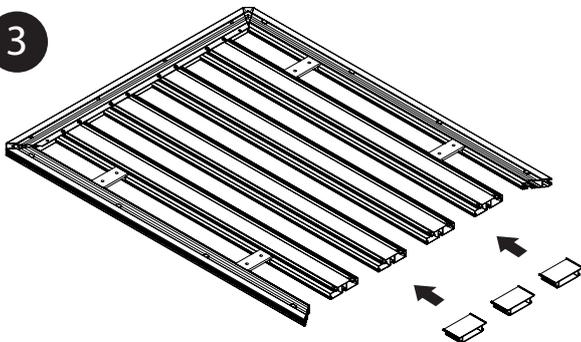

For TFT1212, TFT1512 & TFT1812:
Insert the three interconnecting blocks between the four centre planks.
Position interconnecting blocks in the centre of the tray.









For TFT2014:
Insert the four interconnecting blocks between the five centre planks.
Position interconnecting blocks in the centre of the tray.

4

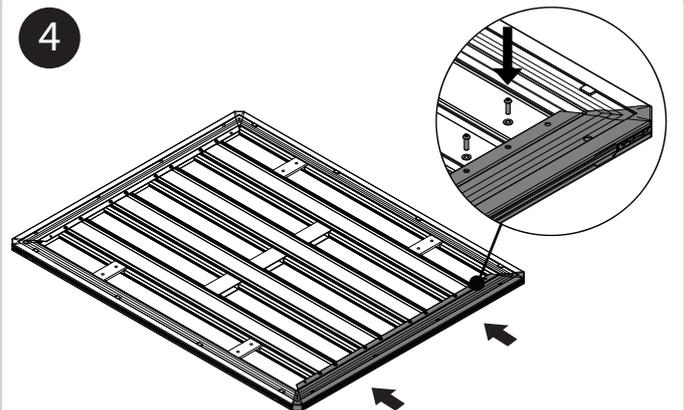

Re-install the end plank and fasteners.
Tighten fasteners securely.

LOW MOUNT OPEN RAIL FITTING INSTRUCTIONS CONTINUED

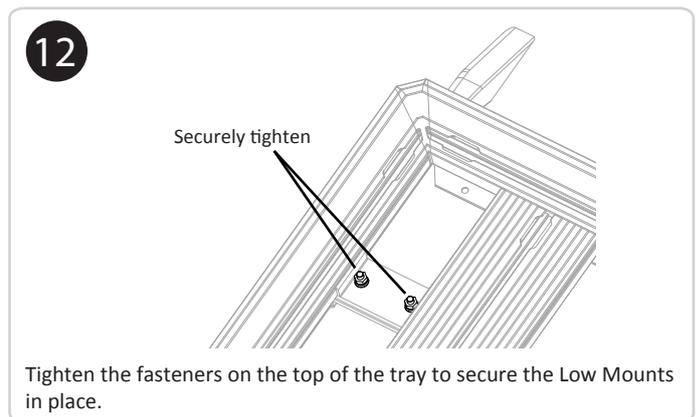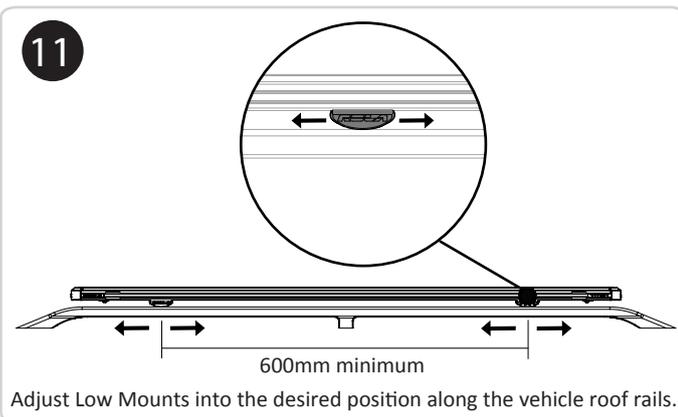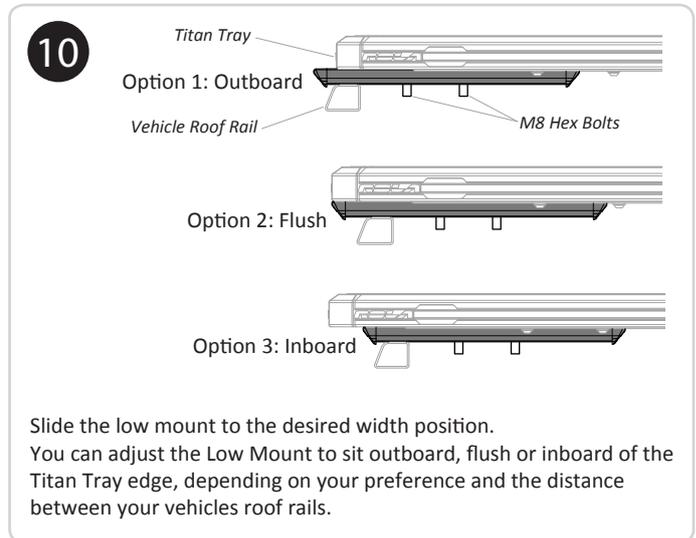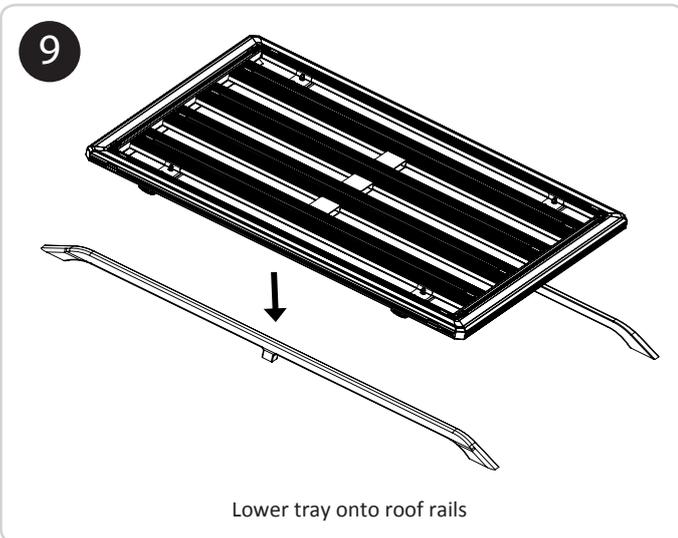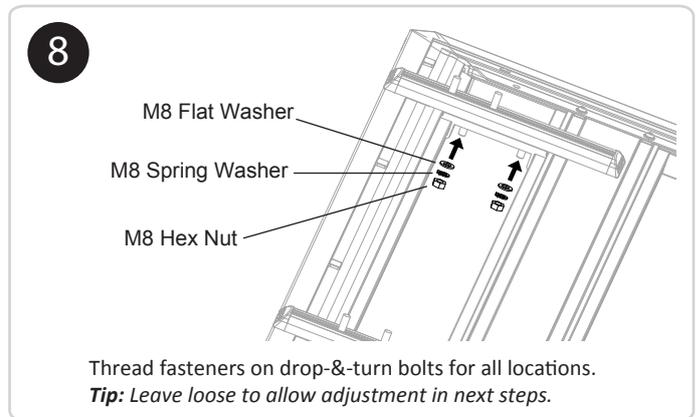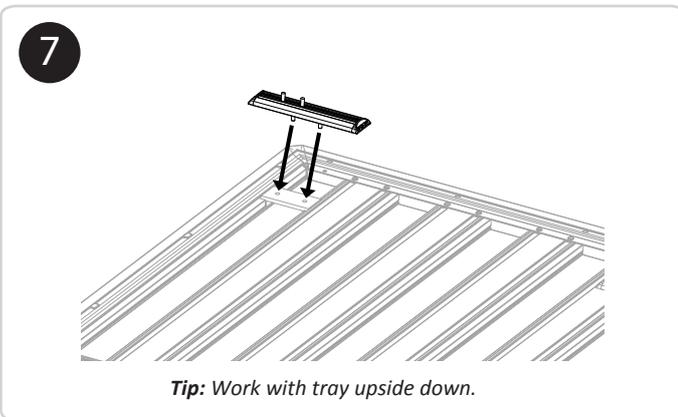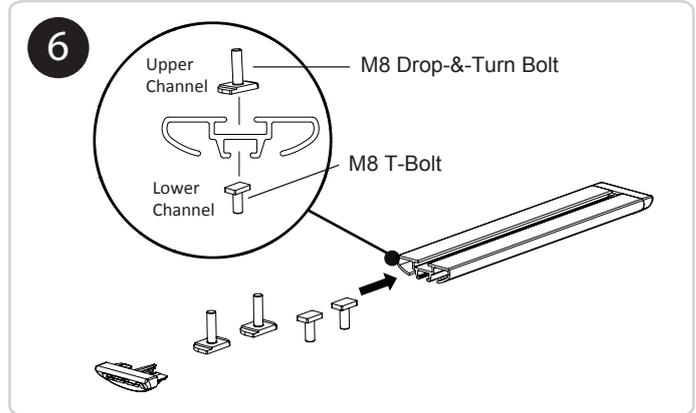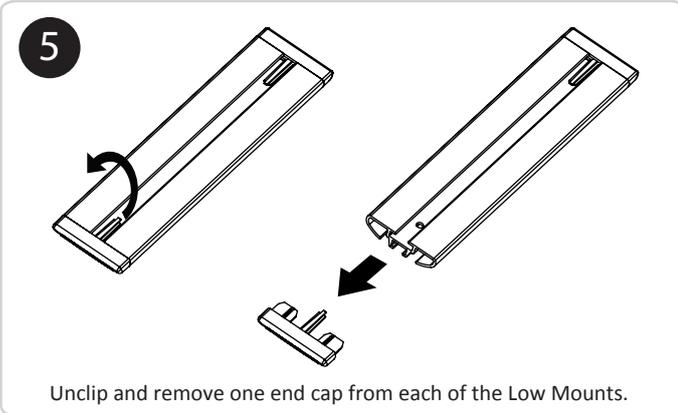


LOW MOUNT OPEN RAIL

FITTING INSTRUCTIONS CONTINUED



13

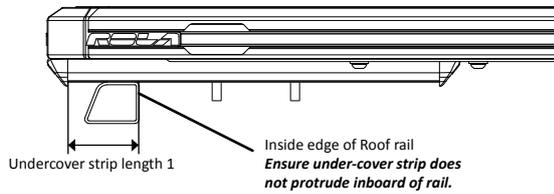

Cut the under-cover strip to the required lengths for each Low Mount.


Tip: Measure the distance between the inside of the rail and the end cap while the tray is in the desired location on the vehicle roof rails.

14



Tip: Remove the tray and work with tray upside down.


15

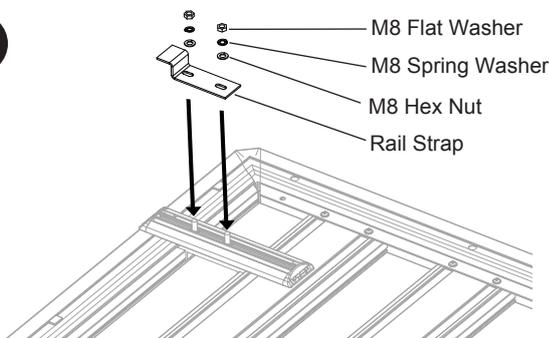

Thread fasteners on M8 Hex bolts for all locations.


Tip: Leave loose to allow adjustment in next steps.

16

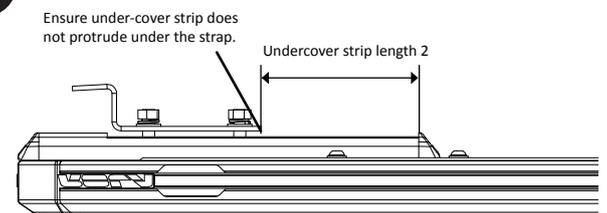

While the tray is upside down, cut and insert under-cover strip lengths for the inner side of each Low Mount.


17

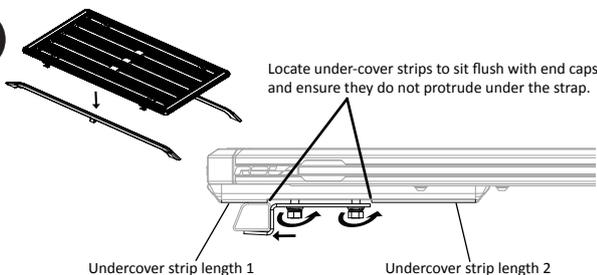

Place tray on roof rails and slide the rail straps in place under the vehicle roof rail.

Securely tighten the fasteners to clamp the rails with the rail straps. Insert undercover strip length 2.

18

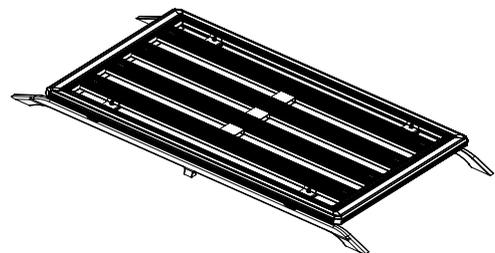

Tighten all remaining loose fasteners and check all fasteners are secure.

Your low mounted tray is now complete.

USAGE INSTRUCTIONS

It is essential for the proper assembly, operation and use of the roof-rack that the instructions and safety precautions supplied are strictly observed. The maximum permissible load for your roof rack or tray is the lower of the maximum load capacity specified in your vehicle operation manual, or specified as applying to the roof-rack or tray. Do not exceed the maximum specified load capacity.

Maximum permissible load = weight of the roof-rack and tray + weight of accessories + weight of cargo load.

When fitting the roof-rack and transporting a load, ensure the vehicle's functions are not impaired (e.g. sunroof, aerials, windscreen wipers, mirrors).

Hatch and wagon vehicles should be inspected for adequate clearance for full opening operation of the boot/tailgate.

Stop and check all screw connections, bolts and retaining straps after a short distance of travel. Repeat these checks at regular intervals.

WARNINGS

Remember that the fitting of a roof-rack and the transport of a load increases the overall height of the carrying vehicle.

Where the roof-rack is to be used in off-road conditions, a safety weight reduction of 1.5 should be observed from the total carrying capacity (e.g. 60kg becomes 40kg).

Cequent will not be liable to the purchaser or any other person for any consequential, direct or indirect loss, damage or costs incurred or suffered by the purchaser or any other person including but not limited to damage to persons or property, loss of turnover, loss of profits, loss of business or goodwill arising from or in relation to the assembly or use of the roof-rack, or the non-observance of the fitting and care instructions.